


INSPECTOR AND DIGILERT MOUNT INSTRUCTIONS

Fig 1

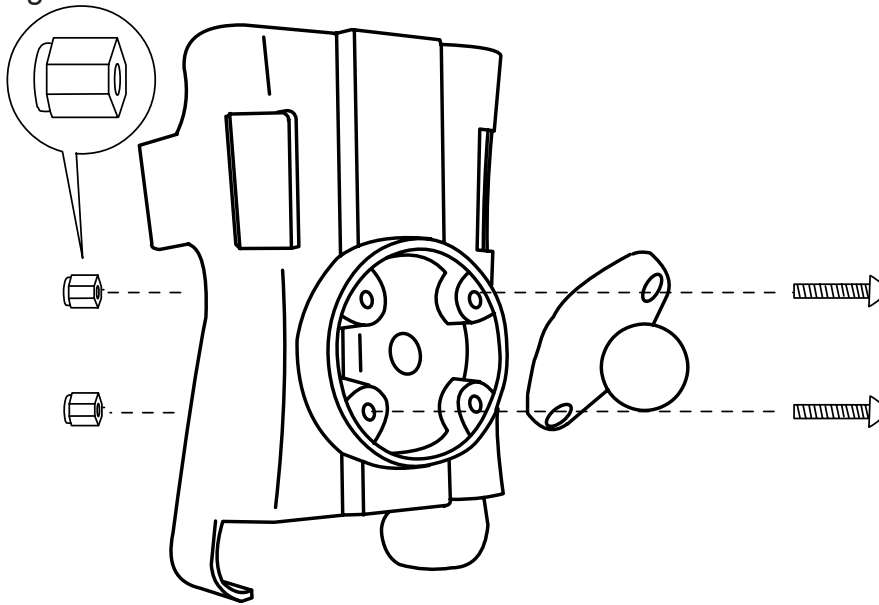

1) Remove the parts from the plastic bags.

2) Attach the center bar to the back of the cradle using two sets of nuts and bolts (included). Insure that the washer side of the nut is facing up so that you can see the washer when it is in hexagonal recess on the inside of the cradle (see fig. 1)

3) After attaching the cradle to the center bar, use the screws to mount the suction cup piece to the other end opposite the cradle. (see fig. 2)

4) Move the level on the suction cup piece to the "off" position. Press the bottom against a smooth surface and engage the suction cup by switching the position to "on".



Fig 2

5) Once assembled, the cradle should look like the drawing in Fig. 3.

6) In order for the Inspector and Digilert100 units to fit into the cradle securely, make sure that it has an Xtreme Boot accessory on the instrument as shown in Fig. 4.

For more information about the Xtreme Boot Accessory, please visit www.seintl.com.

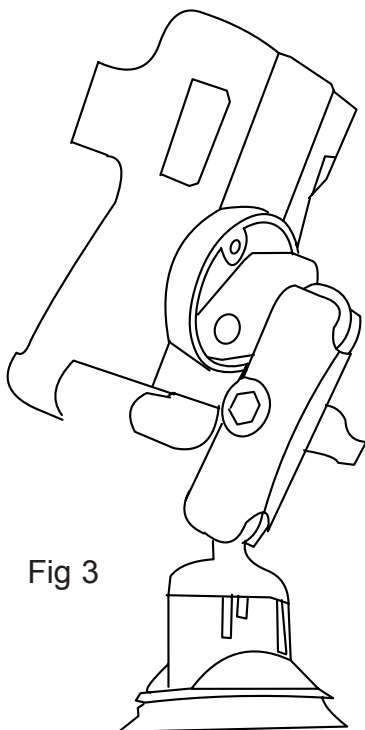


Fig 3



Fig 4